 














 





 


 



 



 

 








 
 
 
 



 


 
 



 

 



 




 











 

 

 




| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Power              |  Power                 |  Timeshift         |  Text / Goto           |
|  Play               |  Play / Slow           |  Input             |  AV / Input / RDS      |
|  Still/Pause        |  Pause / Step / Freeze |  DVD Menu/Original |  Menu / Home           |
|  Stop/Live          |  Stop / Hold           |  Up                |  Up                    |
|  Rec                |  Rec / Rec Mode        |  CH Display        |  Info / Angle          |
|  <</REV             |  << / Tune-            |  Left              |  Left                  |
|  >>/FWD             |  >> / Tune+            |  Set/Enter         |  OK                    |
|  I<< Skip/<I        |  I<< / Preset-         |  Right             |  Right                 |
|  F.ADV II>/Skip     |  >>I / Preset+         |  Exit              |  Exit / Cancel / Clear |
|  DVD Title/Rec List |  Sound / Title         |  Down              |  Down                  |
|  Audio              |  Audio / Lang I/II     |  Return            |  Back / Return         |
|  Subtitle          |  Subtitle / EQ        |  Vol+ Tv          |  Vol+                 |
|  Open/Close       |  Eject / Surround    |  Start Menu      |  Smart / List        |
|  Zoom/Mode Rec    |  Zoom / Size         |  CH+             |  CH+ / Page+         |
|  AV Auto Rec      |  TV/Radio /          |  Vol- Tv         |  Vol-                |
|  Direct           |  D.Menu / Top        |  Display/Back    |  Display / Media     |
|  C/Erase          |  Setup / OPT /       |  CH-             |  CH- / Page-         |





| Original  | Replacement   | Original  | Replacement                 |
|---|---------------|---|-----------------------------|
|    | 1             |    | 1                           |
|    | 2             |    | 2                           |
|    | 3             |    | 3                           |
|    | 4             |    | 4                           |
|    | 5             |    | 5                           |
|    | 6             |    | 6                           |
|    | 7             |    | 7                           |
|    | 8             |    | 8                           |
|    | 9             |    | 9                           |
|    | 100/ENT./AM/F |    | Guide / EPG / -/--          |
|   | 0             |   | 0                           |
|  | VCR Plus      |  | Fav / Marker / PC           |
|  | Red/B         |  | Red / Netflix / Search      |
|  | Green/C       |  | Green / APP / Repeat        |
|  | Yellow/D      |  | Yellow / YouTube / Repeat   |
|  | Blue/A        |  | Blue / Prime Video / Random |
|  | Power Tv      |  | Shift + Power               |

| Original  | Replacement             | Original  | Replacement                 |
|---|-------------------------|---|-----------------------------|
|    | Replay                  |    | Shift + Play /              |
|    | Rec Pause               |    | Shift + Pause / Step /      |
|    | Rec Stop                |    | Shift + Stop /              |
|    | Skip Search             |    | Shift + << /                |
|    | I> Slow                 |    | Shift + >>I / Preset+       |
|   | On Screen/Tamper        |    | Shift + Zoom /              |
|   | Function                |    | Shift + D.Menu / Top Menu   |
|    | Dubbing                 |    | Shift + Setup / OPT / Tools |
|    | P.IN P                  |    | Shift + Text /              |
|    | Input Tv                |    | Shift + AV / Input / RDS    |
|   | Angle                   |   | Shift + Info / Angle        |
|   | Chapter Mark/Connection |  | Shift + Smart / List        |
|  | CH+ Tv                  |  | Shift + CH+ /               |
|  | CH- Tv                  |  | Shift + CH- /               |
|  | DVD                     |  | Shift + 2                   |
|  | HDD                     |  | Shift + 7                   |

