



Original		Replacement		Original		Replacement	
	On/Standby		Power		↑		Shift + Up
	Mute		Mute / Dimmer		↓		Shift + Down
	Freeze		Pause / Step / Freeze		Resize Up		Shift + CH+ /
	R-Click/Menu		D.Menu / Top		Resize Down		Shift + CH- /
	Auto Keystone		Setup / OPT /				
	Input		AV / Input / RDS				
	Auto Set		Menu / Home				
	Up/Zoom+		Up				
	Left		Left				
	Enter		OK				
	Right		Right				
	Cancel		Exit / Cancel / Clear				
	Down/Zoom-		Down				
	Vol+		Vol+				
	↑ (PJ Mode)		CH+ / Page+				
	Vol-		Vol-				
	↓ (PJ Mode)		CH- / Page-				

