



















 
 
 



 











Original	Replacement
 Power	 Power
 Ambilight	 Picture / Format
 Butterfly	 Display / Media
 Smart	 Smart / List
 Pair / Sources	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Shift + Home / Menu /
 List / TV Guide	 Guide / EPG / -/--
 <<<	 <<< / Tune-
 Play	 Play / Slow
 >>>	 >>> / Tune+
 Stop	 Stop / Hold

Original	Replacement
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix /
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer
 FPlay	 Shift + Green / APP /
 TV Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Rakuten TV	 Shift + Yellow / YouTube /
 CH-	 CH- / Page-
 1	 1
 2	 2



