



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	TV/Radio /
	4
	5
	6
	Info / Angle
	7
	8
	9
	Audio / Lang I/II
	Back / Return
	0
	Shift + Goto Text / Goto

Original	Replacement
	Sub-T
	Guide / EPG / -/-
	Fav / Marker / PC
	Menu / Home
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Left
	Vol-
	OK
	Right
	Vol+
	CH- / Page-
	Down
	<< / Tune-
	>> / Tune+
	>>I / Preset+



