



| Original | Replacement |
|----------------|------------------|
| Power | Power |
| Open/Close | Eject / Surround |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Menu/Zoom | Zoom / Size |
| Menu/Zoom | Menu / Home |
| 0 | 0 |
| USB | + 8 Shift + 8 |
| Title/Subtitle | Sound / Title |
| Title/Subtitle | Subtitle / EQ |

| Original | Replacement |
|-------------|-----------------------|
| Angle/Audio | Audio / Lang I/II |
| Angle/Audio | Info / Angle |
| Prog/Repeat | Green / APP / Repeat |
| Prog/Repeat | TV/Radio / |
| Setup | Setup / OPT / |
| Stop | Stop / Hold |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| Left | Left |
| Up | Up |
| Right | Right |
| OK | OK |
| Down | Down |
| << | << / Tune- |
| >> | >> / Tune+ |
| Vol+ | Vol+ |
| I<< | I<< / Preset- |



