



| Original | | Replacement | | Original | | Replacement | |
|----------|-----------------|-------------|-----------------------------|----------|-------------|-------------|------------------|
| | Index | | Play / Slow | | 6 | | 6 |
| | Red / -1 | | Red / Netflix / Search | | Contrast- | | << / Tune- |
| | Green / Timer / | | Green / APP / Repeat | | Contrast+ | | >> / Tune+ |
| | Yellow / Stop | | Yellow / YouTube / Repeat | | 7 | | 7 |
| | Blue / Reveal | | Blue / Prime Video / Random | | 8 | | 8 |
| | [≡]]] | | Rec / Rec Mode | | 9 | | 9 |
| | Cancel | | Exit / Cancel / Clear | | Brightness- | | I<< / Preset- |
| | Size | | Zoom / Size | | Brightness+ | | >>I / Preset+ |
| | TV | | TV/Radio / | | P/C | | Back / Return |
| | Text | | Text / Goto | | 0 | | 0 |
| | 1 | | 1 | | AV | | AV / Input / RDS |
| | 2 | | 2 | | ←•→ | | Display / Media |
| | 3 | | 3 | | ** | | Smart / List |
| | Tint- | | Shift + Left | | PIP | | Picture / Format |
| | Tint+ | | Shift + Right | | i | | Info / Angle |
| | 4 | | 4 | | i | | Menu / Home |
| | 5 | | 5 | | ---- | | Subtitle / EQ |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  Up / P+ |  Up | | |
|  Up / P+ |  CH+ / Page+ | | |
|  Mute |  Mute / Dimmer | | |
|  Left / Vol- |  Left | | |
|  Left / Vol- |  Vol- | | |
|  OK |  OK | | |
|  Right / Vol+ |  Right | | |
|  Right / Vol+ |  Vol+ | | |
|  AUX |  Shift + 7 | | |
|  Down / P- |  Down | | |
|  Down / P- |  CH- / Page- | | |
|  Power |  Power | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement | Original | Replacement |
|----------|-----------------------|----------|-------------|
| | I<< / Preset- | | |
| | >>I / Preset+ | | |
| | Rec / Rec Mode | | |
| | Stop / Hold | | |
| | << / Tune- | | |
| | >> / Tune+ | | |
| | Pause / Step / Freeze | | |
| | Play / Slow | | |
| | CH+ / Page+ | | |
| | CH- / Page- | | |
| | Power | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement | Original | Replacement |
|----------|-----------------------------|----------|------------------|
| -1 | Red / Netflix / Search | *+ | >> / Preset+ |
| +1 | Green / APP / Repeat | P/C | Back / Return |
| STOP | Yellow / YouTube / Repeat | 0 | 0 |
| E? | Blue / Prime Video / Random | PIP | Picture / Format |
| E | Text / Goto | i | Info / Angle |
| 1 | 1 | P+ | CH+ / Page+ |
| 2 | 2 | Up | Up |
| 3 | 3 | Mute | Mute / Dimmer |
| 4 | 4 | Left | Left |
| 5 | 5 | Vol- | Vol- |
| 6 | 6 | OK | OK |
| -0 | << / Tune- | Right | Right |
| 0+ | >> / Tune+ | Vol+ | Vol+ |
| 7 | 7 | AUX | Shift + 7 |
| 8 | 8 | P- | CH- / Page- |
| 9 | 9 | Down | Down |
| -* | << / Preset- | Power | Power |

