
 



 


 

 





 






 

 







Original	Replacement
	 Power
	 Setup / OPT /
	 Mute / Dimmer
	 Shift + Fav / Marker / PC
	 Sound / Title
	 Shift + 4
	 Picture / Format
	 TV/Radio /
	 Shift + 6
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Eject / Surround

Original	Replacement
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Shift + Audio / Lang I/II
	 Subtitle / EQ
	 Audio / Lang I/II
	 Back / Return
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Down
	 Shift + CH+ /
	 Vol+
	 CH+ / Page+
	 Shift + CH- /

Page-





Original	Replacement	Original	Replacement
	VOL — Vol-		
	CH PAGE — CH- / Page-		
	TV 1 1		
	DVD 2 2		
	CD - STB 3 3		
	VIDEO 4 4		
	TAPE 5 5		
	TUNER 6 6		
	AUX - HDD 7 7		
	USB 8 8		
	BLUETOOTH 9 9		
	GUIDE EPG * Guide / EPG / -/--		
	HDMI - SAT 0 0		
	PC FAV MARKER # Fav / Marker / PC		

