





 



 

 

 

 



 

 



 

 

 





 

 

 

 

 

 



 

 

 

 

 

 











Original	Replacement
	 Power
	 Rec / Rec Mode
	 Exit / Cancel / Clear
	 Shift + Subtitle / EQ
	 Mute / Dimmer
	 Picture / Format
	 1
	 2
	 3
	 Subtitle / EQ
	 4
	 5
	 6
	 Audio / Lang I/II
	 7
	 8
	 9

Original	Replacement
	 Zoom / Size
	 0
	 Fav / Marker / PC
	 Sleep / Timer
	 Shift + TV/Radio / Program
	 Setup / OPT /
	 Sound / Title
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Back / Return
	 D.Menu / Top
	 AV / Input / RDS
	 TV/Radio /





Original	Replacement
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	+  Shift + Play /
	Display / Media
	<< / Tune-
	>> / Tune+
	<< / Preset-
	CH- / Page-
	CH+ / Page+
	>>  / Preset+
	Teletext / Text / Goto
	Guide / EPG / -/-
	Vol-
	Vol+
	Red / Netflix / Search
	Green / APP / Repeat

Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

