 



 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-



 







 



 

 

 

 

 



 











 





 

 







 

 

 

 
 










Original	Replacement	Original	Replacement
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow /  <<	  << / Preset-		
 Yellow /  <<	 Yellow / YouTube / Repeat		
 Blue / >>	 Blue / Prime Video / Random		
 Blue / >>	 >>  / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		







Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-



