
























 


 



 



 











 























Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Eject	 Eject / Surround	 9	 9
 Input Select	 AV / Input / RDS	 0	 0
 TV/Video	 TV/Radio /	 << / Tune-	 << / Tune-
 SP/LP	 Zoom / Size	 <<	 I<< / Preset-
 Zero Return	 Back / Return	 Play	 Play / Slow
 Rec. End Search	 Red / Netflix / Search	 >>	 >> / Tune+
 Auto Tracking	 Smart / List	 >>	 >>I / Preset+
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Stop	 Stop / Hold
 3	 3	 OTPB	 Display / Media
 CM Skip	 Info / Angle	 i / Menu	 Menu / Home
 4	 4	 OK /	 OK
 5	 5	 Clear	 Exit / Cancel / Clear
 6	 6	 Rec	 Rec / Rec Mode
 Child Lock	 Green / APP / Repeat	 Left	 Left
 7	 7	 Up /	 Up



CH/Tracking+



Original	Replacement	Original	Replacement
	Up / CH+ / Page+		
	Right		
	Down / CH- / Page-		
	Down / CH- / Page-		
	Fav / Marker / PC		

