













 







 











 















 



 



 



 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 HDMI	 Shift + 0
 1	 1	 P-	 CH- / Page-
 2	 2	 Media	 Shift + Display / Media
 3	 3	 P.Mode	 Picture / Format
 4	 4	 Home	 Shift + Menu /
 5	 5	 S.Mode	 Sound / Title
 6	 6	 Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Source	 AV / Input / RDS
 9	 9	 Left	 Left
 Lang	 Audio / Lang I/II	 Enter	 OK
 0	 0	 Right	 Right
 Recall	 Back / Return	 Display	 Display / Media
 Vol+	 Vol+	 Down	 Down
 */Setting	 Setup / OPT /	 Exit	 Exit / Cancel / Clear
 P+	 CH+ / Page+	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		
	Sub.T Subtitle / EQ		
	Yellow Yellow / YouTube / Repeat		
	Blue/Mouse Blue / Prime Video / Random		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	Stop Stop / Hold		
	<< << / Tune-		
	>> >> / Tune+		
	I<< I<< / Preset-		
	>>I >>I / Preset+		
	Rec Rec / Rec Mode		

