


 



 










 
 


 


 
 




 



 






 

 







 


 











Original	Replacement	Original	Replacement
 Power	 Power	 Goto	 Media
 Eject	 Eject	 Setup	 Options
 Mute	 Mute	 Angle	 Format
 OSD / Info	 Info	 Text / Title	 Text
 V-Mode	 Smart	 Subtitle	 Subt
 P/N / Fav	 Pre Ch	 Menu	 Menu
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 PBC / EPG	 Guide
 7	 7	 Source	 AV
 8	 8	 Exit	 Exit
 9	 9	 <<	 <<
 0	 0	 >>	 >>
 10+	 Shift + Guide	 Play / Pause	 Play





Original		Replacement		Original		Replacement	
	Play / Pause		Pause		Vol+		Vol +
	Stop		Stop				
	I<<		I<<				
	>>I		>>I				
	Red / Prog		Red				
	Red / Prog		Sleep				
	Green / Step		Green				
	Yellow / Repeat		Yellow				
	Yellow / Repeat		Shift + Text				
	Blue / A-B		Blue				
	Zoom		Shift + Eject				
	Slow		TV/R				
	Vocal		Dual				
	Audio		Shift + Dual				
	CH-		Ch -				
	CH+		Ch +				
	Vol-		Vol -				

