
























 












Original	Replacement
 On/Off	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/-
 Recall	 Shift + Back / Return
 Picture	 Picture / Format
 Sound	 Sound / Title
 Source	 AV / Input / RDS

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 FAV	 Fav / Marker / PC
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Info	 Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 TV	 TV/Radio /





Original	Replacement	Original	Replacement
 YouTube	 Yellow / YouTube / Repeat		
 Netflix	 Red / Netflix / Search		
 Smart	 Smart / List		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Stop	 Stop / Hold		
 Rec.List	 Setup / OPT /		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Red/Goto	 Shift + Red / Netflix /		
 Green/A-B	 Green / APP / Repeat		
 Yellow/3D	 Shift + Yellow / YouTube /		
 Blue/Repact	 Blue / Prime Video / Random		

