





















 







 















 





 

 

 







 



 

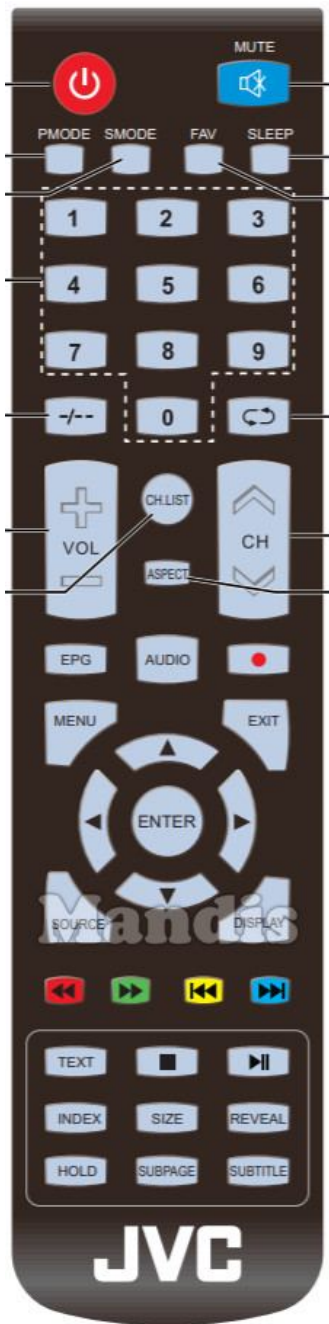


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +/-	 Shift + Guide / EPG / +/-
 0	 0

Original	Replacement
 Recall	 Back / Return
 Vol+	 Vol+
 CH.List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Shift + Picture / Format
 CH-	 CH- / Page-
 EPG	 Guide / EPG / +/-
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Source	 AV / Input / RDS





Original	Replacement
	Down
	Display / Media
	Red / Netflix / Search
	<< / Tune-
	Green / APP / Repeat
	>> / Tune+
	Yellow / YouTube / Repeat
	l<< / Preset-
	Blue / Prime Video / Random
	>>l / Preset+
	Text / Goto
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	D.Menu / Top
	Zoom / Size
	Shift + Back / Return

Original	Replacement
	Shift + Stop /
	Setup / OPT /
	Subtitle / EQ

