 







 




 

 






















Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/--
	 Setup / OPT /
	 Picture / Format
	 AV / Input / RDS
	 Menu / Home
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Original	Replacement
	 Info / Angle
	 Shift + Setup / OPT / Tools
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Smart / List
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3





Original		Replacement		Original	Replacement
<b>4</b> GHI	4	<b>4</b> VIDEO	4		
<b>5</b> JKL	5	<b>5</b> TAPE	5		
<b>MNO 6</b>	6	<b>6</b> TUNER	6		
<b>7</b> PQRS	7	<b>7</b> AUX - HDD	7		
<b>8</b> TUV	8	<b>8</b> USB	8		
<b>9</b> WXYZ	9	<b>9</b> BLUETOOTH	9		
<b>SUBTITLE</b>	Subtitle	<b>SUBTITLE</b> EQ	Subtitle / EQ		
<b>0</b> . _	0	<b>0</b> HDMI - BAT	0		
<b>TEXT</b>	Text	<b>GOTO TEXT</b>	Text / Goto		

