



Original	Replacement		
	Power		Power
	Mute		Mute / Dimmer
	V-Format		Picture / Format
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	List		Smart / List
	SAT		Shift + 0
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Vol +		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol -		Vol-
	Recall		Back / Return
	CH-		CH- / Page-
	Menu		Menu / Home

Original	Replacement		
	Text		Text / Goto
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Page Down		Shift + CH- /
	Left		Left
	OK		OK
	Right		Right
	Page Up		Shift + CH+ /
	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3





Original	Replacement
4 SH	VIDEO 4
5 SH	TAPE 5
6 SH	TUNER 6
7 SH	AUX - HDD 7
8 SH	USB 8
9 SH	BLUETOOTH 9
Speaker	TITLE SOUND Sound / Title
0 SH	HDMI - BAT 0
✓	MEDIA DISPLAY Display / Media

Original	Replacement

