



| Original | Replacement |
|---|--|
|  Standby |  Power |
|  TV/STB |  AV / Input / RDS |
|  Mute |  Mute / Dimmer |
|  F.List |  Display / Media |
|  Repeat |  Shift + Green / APP / REPEAT |
|  Res. |  Shift + Picture / Format |
|  Picture |  Picture / Format |
|  Book |  Shift + Smart / List |
|  Next Page |  Shift + Display / Media |
|  R.Skip |  I<< / Preset- |
|  REW |  << / Tune- |
|  FWD |  >> / Tune+ |
|  F.Skip |  >>I / Preset+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |

| Original | Replacement |
|--|---|
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  CH/PG+ |  CH+ / Page+ |
|  CH/PG- |  CH- / Page- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Info |  Info / Angle |
|  EPG |  Guide / EPG / -/- |
|  Back |  Back / Return |
|  FAV |  Fav / Marker / PC |
|  SAT List |  Smart / List |
|  Option |  Setup / OPT / |





| Original | Replacement |
|---------------|-----------------------------|
| TV/Radio | TV/Radio / |
| Zoom | Zoom / Size |
| F1 | + Shift + 1 |
| Red / Audio | Red / Netflix / Search |
| Red / Audio | Audio / Lang I/II |
| Green / Subt | Subtitle / EQ |
| Yellow / Text | Yellow / YouTube / Repeat |
| Green / Subt | Green / APP / Repeat |
| Yellow / Text | Text / Goto |
| Blue / Sleep | Blue / Prime Video / Random |
| Blue / Sleep | Sleep / Timer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |

| Original | Replacement |
|----------|-------------|
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |

