


 


 
 
 

 

 
 




| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  Green/Slow |  Green |
|  I<< |  I<< |  Yellow/Repeat |  Yellow |
|  Eject |  Eject |  Blue/A-B |  Blue |
|  << |  << |  CH+ |  Ch + |
|  >> |  >> |  CH- |  Ch - |
|  >> |  >> |  Tv-Menu |  Menu |
|  Play |  Play |  TV/AV |  AV |
|  Pause |  Pause |  Vol+ |  Vol + |
|  Stop |  Stop |  Vol- |  Vol - |
|  TV/TXT/Langua |  Text |  DTV |  Shift + Smart |
|  Cancel/Zoom |  Shift + Eject |  DVD Setup |  D. Menu |
|  Reveal/Subtitle |  3D |  Exit |  Exit |
|  Hold/Menu |  Smart |  Display |  Shift + Info |
|  Size/Angle |  Format |  Up |  Up |
|  Subpage/Title |  Options |  Down |  Down |
|  Index/Goto |  Media |  Right |  Right |
|  Red/Program |  Red |  Left |  Left |





| Original | Replacement |
|--|--|
|  OK |  Ok |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  Shift + Guide |
|  Recall |  Back |
|  Picture |  Shift + Format |
|  Sound |  Shift + Dual |
|  Nicam/A2 |  Dual |
|  Mute |  Mute |

| Original | Replacement |
|--|--|
|  Sleep |  Sleep |
|  Info |  Info |
|  Subtitle |  Subt |
|  Channel List |  List |
|  EPG |  Guide |
|  Tv/Radio |  TV/R |
|  FAV |  Pre Ch |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

