








 











 

 



 



 

 

 

 








 






 































 



Original	Replacement
 Power	 Power
 Power Tv	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Txt	 Text / Goto
 0	 0
 [<>]/4:3/16:9	 Picture / Format
 TV	 Subtitle / EQ
 Radio	 TV/Radio /
 Up	 Up

Original	Replacement
 Help	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Music	 Audio / Lang I/II
 Down	 Down
 WWW	 Display / Media
 Video	 +  Shift + 4
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol+ Tv	 +  Shift + Vol+
 M	 Menu / Home
 Prog+	 CH+ / Page+
 Vol-	 Vol-





	Original	Replacement		Original	Replacement
	Vol- Tv	 Shift + Vol-			
	Back	 Back / Return			
	Prog-	 CH- / Page-			
	Mute	 Mute / Dimmer			
	Mute Tv	 Shift + Mute / Dimmer			
	Play	 Play / Slow			
	Pause	 Pause / Step / Freeze			
	Stop	 Stop / Hold			
	Buy	 Fav / Marker / PC			
	l<<	 l<< / Preset-			
	<<	 << / Tune-			
	>>	 >> / Tune+			
	>>l	 >>l / Preset+			

