





















 




 








Original	Replacement	Original	Replacement
On/Off	 Power	Menu	 Menu / Home
Audio Off	 Mute / Dimmer	Menu Up	 Up
Play	 Play / Slow	Angle	 Info / Angle
Stop	 Stop / Hold	Menu Left	 Left
Record	 Rec / Rec Mode	OK Enter	 OK
Rewind	 << / Tune-	Menu Right	 Right
F.Forward	 >> / Tune+	Menu Down	 Down
Prev.	  << / Preset-	Return	 Back / Return
Next	 >>  / Preset+	Volume+	 Vol+
Audio	 Audio / Lang I/II	Slow Up	 CH+ / Page+
Subt.	 Subtitle / EQ	Volume-	 Vol-
Open/Close	 Eject / Surround	Display	 Display / Media
Zoom	 Zoom / Size	1	 1
Progr.	 TV/Radio /	2	 2
Top Menu	 D.Menu / Top	3	 3
Setup	 Setup / OPT /	4	 4
C/CH	 AV / Input / RDS	5	 5



Original	Replacement	Original	Replacement
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
+10	GUIDE EPG		
0	HDMI - BAT 0		
Auto/Track	PC FAV MARKER		
Repeat/1/All	APP REPEAT		
Rep/A-B	YouTube REPEAT A-B		
DVD/TV	SHIFT + TV 1		

