 

 
 

 
 


 
 

 
 
 
 
 
 



	Original	Replacement		Original	Replacement
	 Power	 Power		 6	 Shift + Help /
	 Source Search	 Source		 7	 Shift + Eco / Aspect
	 Help	 Help / Info		 8	 Shift + 3D /
	 Menu	 Menu		 9	 Shift + Blank / Mute
	 Up	 Up		 0	 Shift + Comp / Video
	 Down	 Down		 Freeze	 Freeze / Timer
	 Right	 Right		 Color Mode	 Mode
	 Left	 Left		 E-Zoom+	 + / Play
	 Enter/Auto	 Enter		 E-Zoom-	 - / Stop
	 ESC	 Comp / Video		 A/V Mute	 Blank / Mute
	 Vol+	 Vol + / Page +		 Aspect	 Eco / Aspect
	 Vol-	 Vol - / Page -			
	 1	 Shift + Vol + / Page +			
	 2	 Shift + + / Play			
	 3	 Shift + Volt / Focus			
	 4	 Shift + Vol - / Page -			
	 5	 Shift + - / Stop			

