





 

 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Original	Replacement
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Auto/Goto	 Shift + Text /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Replacement
CH+ CH	CH+ / Page+ CH PAGE
Media	+ Shift + Display / Media
Vol+ VOL	Vol+ VOL
CH- CH	CH- / Page- CH PAGE
Text	Text / Goto GOTO TEXT
Vol- VOL	Vol- VOL
Hold	+ Shift + Stop / SHIFT HOLD
Reveal	Setup / OPT / OPT-TOOLS SETUP
Size	Zoom / Size SIZE ZOOM
Index	Smart / List LIBT SMART
S.Title	Subtitle / EQ EQ SUBTITLE
S.Page	Eject / Surround SURROUND
Play	Play / Slow SLOW
Pause	Pause / Step / Freeze STEP-FREEZE
FAV	Fav / Marker / PC PC FAV MARKER
<<	<< / Tune- TUNE-
>>	>> / Tune+ TUNE+

Original	Replacement
Stop	Stop / Hold HOLD
I<<	I<< / Preset- PRESET-
>>I	>>I / Preset+ PRESET+

