 

 
 
 
 
 
 
 
 
 
 
 

 
 
 
 


 
 



 
 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Ch+	 Ch +
 Display	 +  Shift + Info	 Ch-	 Ch -
 Nicam/A2	 LIST List	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 PMode	 +  Shift + Format	 1	 1
 SMode	 +  Shift + Dual	 2	 2
 Sleep	 Sleep	 3	 3
 Aspect	 3D	 4	 4
 LCD-Menu	 Menu	 5	 5
 DVB-Menu	 D. Menu	 6	 6
 Source	 AV	 7	 7
 Exit	 Exit	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 Text	 Text
 Left	 Left	 Hold	 Media
 Enter	 Ok	 Red	 Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		
 Index	 Smart		
 Size	 Format		
 Reveal	 Options		
 Subpage	 Eject		
 Tv/Radio	 TV/R		
 Lang	 Dual		
 Page-	 I<<		
 Page+	 >>I		
 Subtitle	 Subt		
 Epg	 Guide		
 Fav	 Pre Ch		
 Info	 Info		

