 
 


 

 





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 < Prev.	 I<< / Preset-
 0	 0
 Next >	 >>I / Preset+
 EPG	 Guide / EPG / -/-
 Up	 Up
 FAV	 Fav / Marker / PC
 Left	 Left

Original	Replacement
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Media	 Display / Media
 Back	 Back / Return
 Vol +	 Vol+
 Mute	 Mute / Dimmer
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Replacement
	TUNE- << / Tune-
	SLOW Play / Slow
	STEP-FREEZE Pause / Step / Freeze
	HOLD Stop / Hold
	TUNE+ >> / Tune+
	REC MODE Rec / Rec Mode
	SHIFT + + Sleep / Timer
	LIST Smart / List
	FORMAT Picture / Format
	LANG I/II Audio / Lang I/II
	SIZE Zoom / Size
	EQ Subtitle / EQ
	TIMER Sleep / Timer
	GOTO Text / Goto
	SHIFT + Shift + 1
	PROGRAM TV/Radio /
	RDS AV / Input / RDS

Original	Replacement

