 



 


 


 

 

 

 

 



 
 

 
 







 







 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Audio / Lang I/II
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle

Original	Replacement
 EPG	 Guide / EPG / -/--
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 SAT	 Shift + 0
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Find	 Smart / List
 Pg Up	 CH+ / Page+
 PgDn	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





	Original	Replacement
	<<	 << / Tune-
	>>	 >> / Tune+
	<	  << / Preset-
	>	 >>  / Preset+
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	Rec	 Rec / Rec Mode
	Stop	 Stop / Hold
	Text	 Text / Goto

	Original	Replacement

