
 
 
 
 
 
 

 

 




 





 


 








 
 

 

 
 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV/ZAPP	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement
 Exit/TV-G	 Exit
 ?	 Smart
 @	 Media
 Menu/i	 Menu
 Back	 Back
 Tools	 Options
 Guide	 Guide
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 AV	 AV





Original		Replacement		Original	Replacement
	Mute		Mute		
	I<		I<<		
	>I		>>I		
	<<		<<		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	3D/Search		Format		
	..O/Audio		Dual		
	[...]..		Subt		
	PIP/ECO		3D		
	My Media/CEC		TV/R		

