 

















 
















 












Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I/II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Replacement
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z/Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG/Top Menu	 Guide / EPG / -/--
 TVG/Top Menu	 D.Menu / Top
 TXT/Menu	 Text / Goto



 

















 























 
 
 
 
 
 




 
 

 

 
 

 









Original	Replacement
 TXT/Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ <> ]	 Shift + Zoom /
 Rec/I>	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Menu / Home

 

















 


















 







	Original	Replacement	Original	Replacement
	TXT/Menu	Text / Goto		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	[ <> ]	Shift + Zoom /		
	Rec/l>	Rec / Rec Mode		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	l<	l<< / Preset-		
	>l	>>l / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I/II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Replacement
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z/Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG/Top Menu	 Guide / EPG / -/--
 TVG/Top Menu	 D.Menu / Top
 TXT/Menu	 Text / Goto





Original	Replacement
 TXT/Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [<>]	 Shift + Zoom /
 Rec/l>	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		PR+
	8		CH+ / Page+
	9		Up
	0		Vol-
	AV/CL		Left
	Zoom		OK
	[...]/Subtitle		Right
	Audio/Language		Vol+
	◀/Camera		Down
	?		PR-
			CH- / Page-
			TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			Text / Goto
			D.Menu / Top
			Text / Goto





Original	Replacement
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Zoom /
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

Original	Replacement

