




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	?		Smart / List
	[<>]/[...]		Setup / OPT /
	AV		AV / Input / RDS
	Mute		Mute / Dimmer
	i		Info / Angle
	PIP/Recall		Back / Return

Original	Replacement	Original	Replacement
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Vol+		Vol+
	Right		Right
	TXT/Menu		Menu / Home
	TXT/Menu		Text / Goto
	P-		CH- / Page-
	Down		Down
	TV-G/Top Menu		D.Menu / Top
	Red/Picture/Rec		Red / Netflix / Search
	Red/Picture/Rec		Rec / Rec Mode
	Green/Timer/Play		Green / APP / Repeat
	Green/Timer/Play		Sleep / Timer
	Green/Timer/Play		Play / Slow





























 

 
 






Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
?	Smart / List
[<=>]/[...]	Subtitle / EQ
AV	AV / Input / RDS
Mute	Mute / Dimmer
i	Info / Angle
PIP/Recall	Back / Return

Original	Replacement
P+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
OK	OK
Vol+	Vol+
Right	Right
TXT/Menu	Menu / Home
P-	CH- / Page-
Down	Down
TV-G/Top Menu	D.Menu / Top
Red/Picture/Rec	Rec / Rec Mode
Red/Picture/Rec	Red / Netflix / Search
Green/Timer/Play	Sleep / Timer
Green/Timer/Play	Play / Slow
Green/Timer/Play	Green / APP / Repeat
Yellow/Pause	Yellow / YouTube / Repeat





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ?	 Smart / List
 [<=>]/[...]	 Subtitle / EQ
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer
 i	 Info / Angle
 PIP / Recall	 Back / Return

Original	Replacement
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Right	 Right
 TXT/Menu	 Menu / Home
 P-	 CH- / Page-
 Down	 Down
 TV-G/Top Menu	 D.Menu / Top
 Red/Picture/Rec	 Red / Netflix / Search
 Red/Picture/Rec	 Rec / Rec Mode
 Green/Timer/Play	 Sleep / Timer
 Green/Timer/Play	 Green / APP / Repeat
 Green/Timer/Play	 Play / Slow
 Yellow/Pause	 Yellow / YouTube / Repeat



