


























 



 



 



 




































Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2



 



 











 










 



 



 



 














 















	Original	Replacement		Original	Replacement
	3	 3			Left / Vol-
	4	 4			Down / CH-
	5	 5			Down / CH-
	6	 6			Rec / Rec Mode
	7	 7			Stop / Hold
	8	 8			Pause / Step / Freeze
	9	 9			Play / Slow
	VPT	 Guide / EPG / -/--			Eject / Surround
	0	 0			<< / Tune-
	AV	 AV / Input / RDS			>> / Tune+
	i	 Info / Angle			Red / Netflix / Search
	Up / CH+	 Up			Green / APP / Repeat
	Up / CH+	 CH+ / Page+			Yellow / YouTube / Repeat
	Right / Vol+	 Right			Blue / Prime Video / Random
	Right / Vol+	 Vol+			
	OK	 OK			
	Left / Vol-	 Vol-			








Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2





Original		Replacement		Original		Replacement	
	3		3		Left / Vol-		Vol-
	4		4		Down / CH-		Down
	5		5		Down / CH-		CH- / Page-
	6		6		Rec		Rec / Rec Mode
	7		7		Stop		Stop / Hold
	8		8		Pause		Pause / Step / Freeze
	9		9		Play		Play / Slow
	VPT		Guide / EPG / -/--		Open / Close		Eject / Surround
	0		0		<<		<< / Tune-
	AV		AV / Input / RDS		>>		>> / Tune+
	i		Info / Angle		Index		Red / Netflix / Search
	Up / CH+		Up		Index Mark		Green / APP / Repeat
	Up / CH+		CH+ / Page+		Index Erase		Yellow / YouTube / Repeat
	Right / Vol+		Right		Tracking		Blue / Prime Video / Random
	Right / Vol+		Vol+				
	OK		OK				
	Left / Vol-		Left				







Original		Replacement		Original		Replacement	
	Power		Power		Left / Vol-		Vol-
	1		1		Down / CH-		Down
	2		2		Down / CH-		CH- / Page-
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	AV		AV / Input / RDS				
	Up / CH+		Up				
	Up / CH+		CH+ / Page+				
	Right / Vol+		Right				
	Right / Vol+		Vol+				
	Left / Vol-		Left				

