






























 







Original	Replacement	Original	Replacement
	M		Menu / Home
	Power		Up
	1		Left
	2		OK
	3		Right
	4		Down
	5		Vol-
	6		Vol+
	7		Play / Slow
	8		Stop / Hold
	9		I<< / Preset-
	Fav		I>> / Preset+
	0		Repeat
	Mute		Green / APP / Repeat
	i		CH+ / Page+
	[*]		CH- / Page-
	EQ		S
			Display / Media

