
 
 
 






 




 






Original		Replacement		Original		Replacement	
	Power		Power		Yellow		Yellow
	Play		Play		Blue		Blue
	Pause		Pause		CH+		Ch +
	<<		<<		CH-		Ch -
	>>		>>		Source		AV
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Stop		Stop		Menu		Menu
	TV/TXT		Text		Rec		Rec
	Cancel		Eject		Up		Up
	Reveal		D. Menu		Down		Down
	Hold		Media		Right		Right
	Size		3D		Left		Left
	Subpage		Shift + Subt		OK		Ok
	Index		List		DVB		Smart
	Red		Red		Exit		Exit
	Green		Green		1		1





Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT +  Shift + Guide
	 Back
	SHIFT +  Shift + Format
	SHIFT +  Shift + Dual
	 Options
	 Mute
	 Sleep
	 TV/R

Original	Replacement
	FAV
	FAV+
	FAV-
	Subtitle
	Pic Format
	Text
	Display
	Language
	EPG
	 Pre Ch
	SHIFT +  Shift + Ch +
	SHIFT +  Shift + Ch -
	 Subt
	 Format
	SHIFT +  Shift + Text
	 Info
	 Dual
	 Guide

