



Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Shift + Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow





 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 


 
 
 



 


 
 


 


 







Original	Replacement
Preset ▲	Shift + Ch +
Preset ▼	Shift + Ch -
OSD	Back
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	Shift + 2
AVR	Shift + 1
CD	Shift + 3
Tape	Shift + 4
VID1/VCR	Shift + 5
VID2/TV	Shift + 6
VID3/CBL/SAT	Shift + 7
VID4	Shift + 8
AM/FM	Shift + 9
6 CH.	Guide

Original	Replacement
> DVD	Play
<< DVD	<<
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I







 









 

 
 



 


 



 
 

 

 



 

 
 




 







 




 

 
 





 

 


Original		Replacement		Original		Replacement	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<









Original	Replacement	Original	Replacement
 Power On	 Power	 Preset ▲/Blue	 Ch +
 Power Off	 Shift + Power	 RDS/D.Skip	 Options
 SPKR/Menu	 Menu	 >>	 >>
 Delay/Normal	 Info	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	  <<	  <<
 6	 6	 Power (On /Off)	 Media
 7	 7	 PR+ VCR	 Shift + Ch +
 8	 8	 PR- VCR	 Ch -
 9	 9	 Vol+ VCR	 Vol +
 0	 0	 Vol- VCR	 Vol -
 Tun-M/[≡+]	 Guide	 Input VCR	 AV
 Mem/[≡◆]	 Pre Ch	 1 VCR	 Shift + 1
 Direct	 Smart	 2 VCR	 Shift + 2





Original	Replacement
 3 VCR	 Shift + 3
 4 VCR	 Shift + 4
 5 VCR	 Shift + 5
 6 VCR	 Shift + 6
 7 VCR	 Shift + 7
 8 VCR	 Shift + 8
 9 VCR	 Shift + 9
 0 VCR	 Shift + 0
 Clear VCR	 Exit
 Play VCR	 Red
 Stop VCR	 Green
 Rec VCR	 Rec
 >> VCR	 Blue
 << VCR	 Yellow

Original	Replacement





