



Original	Replacement	Original	Replacement
	On		Power
	Off		Shift + Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Test		Smart
	Night		Exit
	[≡]		Text
	Sleep		Sleep
	Surr.		Dual
	SPKR/Menu		Menu
	Delay/Normal		Info
	CH./[≡?]		TV/R
	Digital/[≡X]		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tun-M/[≡+]		Shift + Guide
	Mem/[≡◇]		Pre Ch
	Tuning ▲		Ch +
	Tuning ▼		Ch -
	Direct/Green		Green
	Clear/Yellow		Yellow



 


 


 
 





 
 



 



 


 
 

 
 
 
 


 
 


 
 
 
 


 
 
 



 


 
 


 


 









Original	Replacement
Preset ▲	SHIFT + Shift + Ch +
Preset ▼	SHIFT + Shift + Ch -
OSD	Back
RDS/D.Skip	Options
Set	Ok
Red	Red
Blue	Blue
DVD	SHIFT + Shift + 2
AVR	SHIFT + Shift + 1
CD	SHIFT + Shift + 3
Tape	SHIFT + Shift + 4
VID1/VCR	SHIFT + Shift + 5
VID2/TV	SHIFT + Shift + 6
VID3/CBL/SAT	SHIFT + Shift + 7
VID4	SHIFT + Shift + 8
AM/FM	SHIFT + Shift + 9
6 CH.	Guide

Original	Replacement
> DVD	Play
<< DVD	<<
>> DVD	>>
Stop DVD	Stop
Pause DVD	Pause
I<</Skip Down	I<<
Skip Up/>>I	>>I





Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 [=]	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 









 

 
 



 


 



 
 

 

 



 

 
 




 







 




 

 
 





 

 






Original	Replacement	Original	Replacement
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<





Original		Replacement		Original		Replacement	
	Power On		Power		Preset ▲/Blue		Ch +
	Power Off		Shift + Power		RDS/D.Skip		Options
	SPKR/Menu		Menu		>>		>>
	Delay/Normal		Info		<<		<<
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		<<		<<
	6		6		Power (On /Off)		Media
	7		7		PR+ VCR		Shift + Ch +
	8		8		PR- VCR		Ch -
	9		9		Vol+ VCR		Vol +
	0		0		Vol- VCR		Vol -
	Tun-M/[≡+]		Guide		Input VCR		AV
	Mem/[≡◆]		Pre Ch		1 VCR		Shift + 1
	Direct		Smart		2 VCR		Shift + 2





Original	Replacement	Original	Replacement
3 VCR	+ Shift + 3		
4 VCR	+ Shift + 4		
5 VCR	+ Shift + 5		
6 VCR	+ Shift + 6		
7 VCR	+ Shift + 7		
8 VCR	+ Shift + 8		
9 VCR	+ Shift + 9		
0 VCR	+ Shift + 0		
Clear VCR	Exit		
Play VCR	Red		
Stop VCR	Green		
Rec VCR	Rec		
>> VCR	Blue		
<< VCR	Yellow		

Original	Replacement





	Original	Replacement	Original	Replacement
	<>	 Play		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Rec	 Rec		

