


 

 
 












 
 
 

Original	Replacement
 On	 Power
 Off	 +  Shift + Power
 Mute	 Mute
 AVR	 +  Shift + 1
 DVD	 +  Shift + 2
 CD	 +  Shift + 3
 Tape	 +  Shift + 4
 VID1/VCR	 +  Shift + 5
 VID2/TV	 +  Shift + 6
 VID3/CBL/SAT	 +  Shift + 7
 VID4	 +  Shift + 8
 AM/FM	 +  Shift + 9
 6/8 CH	 +  Shift + Guide
 Sleep	 Sleep
 Test	 Text
 Surr.	 Dual
 Night	 List

Original	Replacement
 M-Room	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 CH./[≡?]	 TV/R
 SPKR/Menu	 Menu
 Up	 Up
 Left	 Left
 Set	 Ok
 Right	 Right
 Down	 Down
 Digital/[≡X]	 Subt
 Delay/Normal	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5



 


 
 

 


 
 


 

 





 



 



 



 



 

 
 
 
 


 
 



 

 


 
 
 





 
 


 


Original	Replacement
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡+]	 Smart
 Mem/[≡◆]	 Media
 Tuning ▲	 Ch +
 Tuning ▼	 Ch -
 Direct	 Guide
 Clear	 Exit
 OSD	 Info
 RDS	 Options
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 Dolby	 Red
 DTS Surr.	 Green

Original	Replacement
 DTS Neo 6	 Yellow
 Logic 7	 Blue
 Stereo	 Shift + Red
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I
 << DVD	 <<
 Play DVD	 Play
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause

 













Original	Replacement	Original	Replacement
 Power On	 Power	 3	 3
 Power Off	 Shift + Power	 4	 4
 Night	 Exit	 5	 5
 M-Room	 Text	 6	 6
 Vol+	 Vol +	 7	 7
 Vol-	 Vol -	 8	 8
 SPKR/Menu	 Menu	 9	 9
 CH./[≡?]	 TV/R	 0	 0
 Digital/[≡X]	 Media	 Tun-M/[≡+]	 Guide
 Delay/Normal	 Info	 Mem/[≡◇]	 Pre Ch
 Up	 Up	 Direct	 Smart
 Down	 Down	 Clear	 Shift + Exit
 Right	 Right	 Preset ▲	 Ch +
 Left	 Left	 Preset ▼	 Ch -
 Set	 Ok	 RDS/D.Skip	 Options
 1	 1	 >>	 >>
 2	 2	 <<	 <<

 





 
 


 







 










 
 
 
 





 

 



 











 
 
 



 





Original		Replacement		Original	Replacement
	Play		Play		
	Stop		Stop		
	Pause		Pause		
	>>		>>		
	<<		<<		





Original	Replacement	Original	Replacement
 Power On	 Power	 Preset ▲/Blue	 Ch +
 Power Off	 Shift + Power	 RDS/D.Skip	 Options
 SPKR/MENU	 Menu	 >>	 >>
 Delay/Normal	 Info	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	 <<	 <<
 6	 6	 Power (On /Off)	 Media
 7	 7	 PR+ VCR	 Shift + Ch +
 8	 8	 PR- VCR	 Ch -
 9	 9	 Vol+ VCR	 Vol +
 0	 0	 Vol- VCR	 Vol -
 Tun-M/[≡+]	 Guide	 1 VCR	 Shift + 1
 Mem/[≡♦]	 Pre Ch	 2 VCR	 Shift + 2
 Direct	 Smart	 3 VCR	 Shift + 3

 
 
 

 
 
 







Original	Replacement	Original	Replacement
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7
	8 VCR		Shift + 8
	9 VCR		Shift + 9
	0 VCR		Shift + 0
	Clear VCR		Exit
	Play VCR		Red
	Stop VCR		Green
	Rec VCR		Rec
	>> VCR		Blue
	<< VCR		Yellow





	Original	Replacement	Original	Replacement
	<>	 Play		
	>>	 >>		
	<<	 <<		
	Stop	 Stop		
	Rec	 Rec		

