







 



 
 







 






 



 



 



 
 
 
 
 
 

 
 
 
 
 




 







Original	Replacement	Original	Replacement
 Power	 Power	 DVD Menu	 D. Menu
 Open / Close	 Eject	 Setup	 Menu
 1	 1	 I<<	 I<<
 2	 2	 >>I	 >>I
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 <<	 <<
 9	 9	 >>	 >>
 0	 0	 Play	 Play
 Display	 Info	 Pause / Step	 Pause
 +10	 Guide	 Slow	 Rec
 Vol-	 Vol -	 Stop	 Stop
 Vol+	 Vol +	 Program	 Sleep
 Mute	 Mute	 Subtitle	 Subt





Original		Replacement		Original		Replacement	
	Cancel		Exit				
	Search		TV/R				
	PAL-MUL-NT		Format				
	Angle		Smart				
	Repeat		Text				
	Audio		Dual				
	Zoom		Shift + Eject				
	A-B		Shift + Text				

