 







 









 

 

 







 






 
 
 

 

 



 

 

 

 




 
 

 
 


 













Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 Home	 Menu / Home
 1	 1	 P-	 CH- / Page-
 2	 2	 Netflix	 Shift + Red / Netflix /
 3	 3	 YouTube	 Shift + Yellow / YouTube /
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Up	 Up
 6	 6	 i	 Info / Angle
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 Lang	 Audio / Lang I/II	 Down	 Down
 0	 0	 Back	 Back / Return
 TXT	 Text / Goto	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 *1	 Smart / List
 Mute	 Mute / Dimmer	 prime video	 Shift + Blue / Prime
 P+	 CH+ / Page+	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green / APP / Repeat 		
	Yellow / YouTube / Repeat 		
	Blue / Prime Video / Random 		
	<< / Tune- 		
	Pause / Step / Freeze 		
	>> / Tune+ 		
	Rec / Rec Mode 		
	Play / Slow 		
	Stop / Hold 		

Original	Replacement	Original	Replacement

