


Original	Replacement
 Standby	 Power
 P/N	 Smart / List
 Mute	 Mute / Dimmer
 Eject	 Eject / Surround
 Prog	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Search	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle

Original	Replacement
 0	 0
 10+	 Guide / EPG / -/-
 PBC	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 Menu	 Menu / Home
 Channel	 Text / Goto
 Language	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Mark	 Fav / Marker / PC

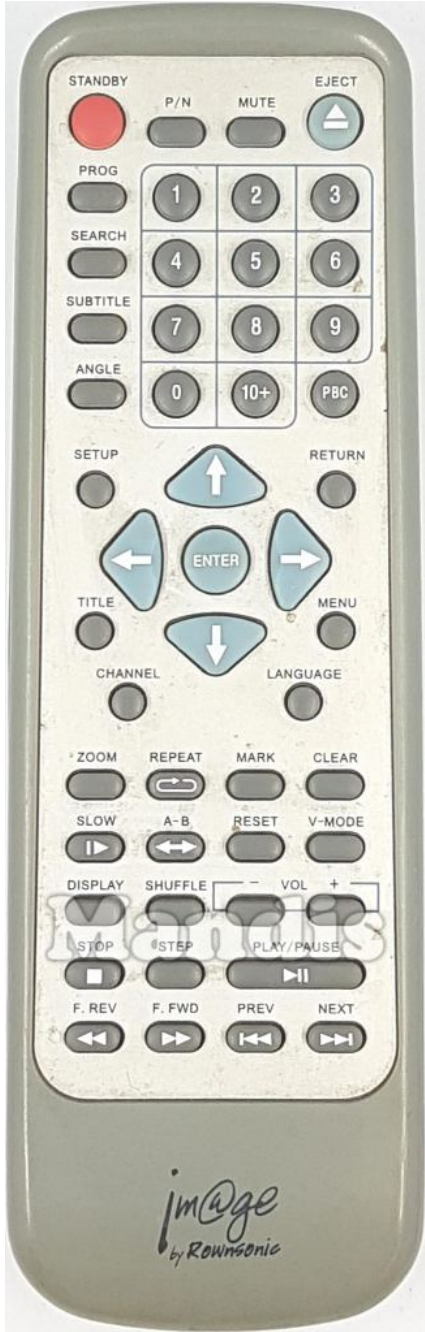



Original	Replacement	Original	Replacement
Clear	Exit / Cancel / Clear		
I> Slow	Shift + Play /		
↔/A-B	Yellow / YouTube / Repeat		
Reset	AV / Input / RDS		
V-Mode	Picture / Format		
Display	Display / Media		
Shuffle	Blue / Prime Video / Random		
Vol-	Vol-		
Vol+	Vol+		
Stop	Stop / Hold		
Step	Shift + Pause / Step /		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
<</F.Rev	<< / Tune-		
>>/F.FWD	>> / Tune+		
I<</Prev	I<< / Preset-		
>>I/Next	>>I / Preset+		

Original	Replacement

