



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Pic Size		Format
	Pic Mode		Shift + Format
	Sleep		Sleep
	Dual I-II		Dual
	S.Mode		Shift + Dual
	Still		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Guide
	S.Swap		Pre Ch
	PIP		I<<
	P.Input		Options
	P.Position		>>
	P.Size		>>I
	P.Swap		Subt
	TV		Subt
	PC/HDMI		TV/R
	AV/Sel		Media
	Source		Smart
	Menu		AV
	Exit		Menu
	TTX/On		Exit
	Mix		Text
			Shift + Text





Original	Replacement	Original	Replacement
			Info
			Shift + AV
			Eject
			D. Menu
	Shift + Smart		
	List		
	Back		

