

 
 



 




 


 





 


 





 





 



 
 



 
 

 
 

 
 

 


 

 




 
 
 
 






Original	Replacement	Original	Replacement
 Power Audio	 Power	 Set	 Options
 Power Tv	 Shift + Power	 On Screen	 Shift + Options
 1	 1	 Display	 Info
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Enter	 Ok
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Fade Muting	 Mute
 0	 0	 Zoom	 Eject
 10	 Guide	 Audio	 Dual
 +10	 Pre Ch	 Subtitle	 Subt
 Menu PL	 Menu	 Angle	 Red
 Top Menu/PG	 Smart	 Clock/Timer	 Shift + AV
 Set Up	 Media	 Treble/Bass	 Green





Original	Replacement	Original	Replacement
 AHP Pro	 Blue	 Cancel	 Exit
 Repeat	 Text	 Repeat A-B	 Shift + Text
 Play DVD/CD	 Play	 Rev. Mode	 3D
 Stop	 Stop	 #	 Shift + Right
 Pause	 Pause	 b	 Shift + Left
 <</Slow-	 <<	 I<<	 Shift + Ch -
 >>/Slow+	 >>	 >>I	 Shift + Ch +
 I<<	 I<<	 Karaoke	 D. Menu
 >>I	 >>I	 Echo	 Shift + Menu
 FM/Play Mode	 Shift + Play	 Dimmer	 Shift + 1
 Sound Turbo II	 Format	 Return	 Shift + Back
 Tape <>	 AV	 Sleep	 Sleep
 FM/AM/AUX	 TV/R	 A.Standby	 Shift + 3
 Tv/Video	 Shift + TV/R	 VFP	 Shift + 4
 ←	 Back	 Scan Mode	 Shift + 5
 Tv CH+	 Ch +	 3D Phonic	 Shift + 7
 Tv CH-	 Ch -	 .))	 Shift + 8

Original	Replacement	Original	Replacement
 Cancel	 Exit	 Repeat A-B	 Shift + Text
 Rev. Mode	 3D	 #	 Shift + Right
 b	 Shift + Left	 I<<	 Shift + Ch -
 >>I	 Shift + Ch +	 Karaoke	 D. Menu
 Echo	 Shift + Menu	 Dimmer	 Shift + 1
 Return	 Shift + Back	 Sleep	 Sleep
 A.Standby	 Shift + 3	 VFP	 Shift + 4
 Scan Mode	 Shift + 5	 3D Phonic	 Shift + 7
 .))	 Shift + 8		





Original	Replacement	Original	Replacement
DVD LEVEL 9	DVD Level	SHIFT	+ 9 Shift + 9
PAGE 10	Page	DISC NAV LIST	List
+	Tv Vol+	SHIFT	+ +VOL Shift + Vol +
-	Tv Vol-	SHIFT	+ -VOL Shift + Vol -

