

 


 
 



 

 

 



 










Original		Replacement		Original		Replacement	
	Open/Close		Eject / Surround		7		7
	Standby Tv		Shift + Power		9 Tv		Shift + 9
	Standby		Power		8		8
	1 Tv		Shift + 1		9		9
	2 Tv		Shift + 2		0 Tv		Shift + 0
	2		2		0		0
	3 Tv		Shift + 3		-/-- Tv		Guide / EPG / -/--
	1		1		10		Shift + Guide / EPG / -/--
	4 Tv		Shift + 4		+10		Fav / Marker / PC
	3		3		Return		Back / Return
	4		4		Page		Setup / OPT /
	5 Tv		Shift + 5		Title/Group		Info / Angle
	5		5		Tv/Video		Shift + TV/Radio / Program
	6 Tv		Shift + 6		Cancel		Exit / Cancel / Clear
	7 Tv		Shift + 7		Top Menu		D.Menu / Top
	6		6		Choice		TV/Radio /
	8 Tv		Shift + 8		Menu		Menu / Home





Original	Replacement
 CH+ Tv	 Shift + CH+ /
 Up	 Up
 CH- Tv	 Shift + CH- /
 Vol- Tv	 Shift + Vol-
 Down	 Down
 Vol+ Tv	 Shift + Vol+
 Right	 Right
 Enter	 OK
 Left	 Left
 I<</Previous	 I<< / Preset-
 On Screen	 Display / Media
 >>I/Next	 >>I / Preset+
 Stop/Clear	 Stop / Hold
 Play/Select	 Play / Slow
 Pause/Strobe	 Pause / Step / Freeze
 <</Slow-	 << / Tune-
 >>/Slow+	 >> / Tune+

Original	Replacement
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 Audio/fs/Rate	 Audio / Lang I/II
 VFP/Progressive Scan	 Picture / Format
 Digest	 AV / Input / RDS
 Angle	 Shift + Info / Angle
 Zoom-	 CH- / Page-
 Zoom+	 CH+ / Page+
 3D Phonic	 Zoom / Size
 PAL/NTSC	 Sleep / Timer
 Amp Vol-	 Vol-
 Amp Vol+	 Vol+
 Muting Tv	 Mute / Dimmer

