 



 

 







 

 

 

 



 

 





 














Original	Replacement
 A.Monitor	 Mute / Dimmer
 Power	 Power
 A / B	 Yellow / YouTube / Repeat
 TV / VCR	 AV / Input / RDS
 Prog. Check	 D.Menu / Top
 Display	 Display / Media
 OSD / Enter	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Cancel	 Exit / Cancel / Clear

Original	Replacement
 0	 0
 Timer	 Sleep / Timer
 Start+	 Shift + Up
 Stop+	 Shift + Right
 Date+	 Shift + CH+ /
 Start-	 Shift + Down
 Stop-	 Shift + Left
 Date-	 Shift + CH- /
 Prog.	 TV/Radio /
 SP/LP / SP/EP	 Setup / OPT /
 DV	 CH+ / Page+
 VHS	 CH- / Page-
 << / Tune-	 << / Tune-
 Play	 Play / Slow
 >> / Tune+	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold

 



 









 







 
 





 













Original	Replacement	Original	Replacement
	Pause / Step / Freeze		
	Up		
	I<< / Preset-		
	Left / -		
	>>I / Preset+		
	Right / -		
	Down		
	Menu / Home		
	OK		







 

 



 



 









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Tv/VCR	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 X	 Exit / Cancel / Clear
 0/AUX	 0
 Timer	 Sleep / Timer
 Prog-	 CH- / Page-
 "/	 Picture / Format

Original	Replacement
 Prog+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+





Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		

