
 





























 


































 






Original		Replacement		Original		Replacement	
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		P+		CH+ / Page+
	4		4		Zurück		Back / Return
	5		5		Vol+		Vol+
	6		6		P-		CH- / Page-
	7		7		Esc / TV		Exit / Cancel / Clear
	8		8		Vol-		Vol-
	9		9		Text		Text / Goto
	0		0		Mute		Mute / Dimmer
	Liste		Smart / List		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Green		Green / APP / Repeat
	PPV		D.Menu / Top		Yellow		Yellow / YouTube / Repeat
	Dienste		Display / Media		Blue		Blue / Prime Video / Random
	Up		Up		TV / Radio		TV/Radio /
	Left		Left		Opt		Setup / OPT /





Original	Replacement	Original	Replacement
 i	Info / Angle		
	Menu / Home		

Original	Replacement

