



 

 

 

 
 












 

 

 


 










 

 

 
 








 

Original	Replacement	Original	Replacement
 Power	 Power	 OK	 OK
 TV	 TV/Radio /	 Left / Vol-	 Vol-
 1	 1	 Left / Vol-	 Left
 2	 2	 Up / PR+	 CH+ / Page+
 3	 3	 Up / PR+	 Up
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Right / Vol+	 Right
 6	 6	 Down / PR-	 Down
 7	 7	 Down / PR-	 CH- / Page-
 8	 8	 <<	 << / Tune-
 9	 9	 Play	 Play / Slow
 Input	 AV / Input / RDS	 >>	 >> / Tune+
 0	 0	 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer	 Stop	 Stop / Hold
 Ratio	 Picture / Format	 Rec	 Rec / Rec Mode
 Exit	 Exit / Cancel / Clear	 I<<	 I<< / Preset-
 Menu	 Menu / Home	 Simplink	 Display / Media

Original	Replacement	Original	Replacement
 Power	 Power	 OK	 OK
 TV	 TV/Radio /	 Left / Vol-	 Vol-
 1	 1	 Left / Vol-	 Left
 2	 2	 Up / PR+	 CH+ / Page+
 3	 3	 Up / PR+	 Up
 4	 4	 Right / Vol+	 Vol+
 5	 5	 Right / Vol+	 Right
 6	 6	 Down / PR-	 Down
 7	 7	 Down / PR-	 CH- / Page-
 8	 8	 <<	 << / Tune-
 9	 9	 Play	 Play / Slow
 Input	 AV / Input / RDS	 >>	 >> / Tune+
 0	 0	 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer	 Stop	 Stop / Hold
 Ratio	 Picture / Format	 Rec	 Rec / Rec Mode
 Exit	 Exit / Cancel / Clear	 I<<	 I<< / Preset-
 Menu	 Menu / Home	 Simplink	 Display / Media





Original	Replacement
 >>I	 >>I / Preset+
 Fav	 Fav / Marker / PC
 Q.View	 Info / Angle
 List	 Smart / List
 Sleep	 Sleep / Timer
 I/II	 Audio / Lang I/II
 Time	 Shift + Sleep / Timer
 Hold	 Shift + Stop /
 Size	 Zoom / Size
 Position	 Eject / Surround
 Reveal	 Subtitle / EQ
 Index	 Sound / Title
 Text	 Text / Goto
 PIP	 Guide / EPG / -/--
 Red / PIP PR-	 Red / Netflix / Search
 Green / PIP PR+	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue / PIP Input	 Blue / Prime Video / Random

