 

 





 

 

 




 
 
 


 



 

 
 




|  | Original  | Replacement | Original  | Replacement          |
|--|---|-------------|---|----------------------|
|  |    | Start       |    | Power                |
|  |    | Home        |    | Menu / Home          |
|  |    | Mode        |    | Setup / OPT /        |
|  |    | Turbo       |    | Smart / List         |
|  |    | Up          |    | Up                   |
|  |    | Left        |    | Left                 |
|  |    | Stop/OK     |    | OK                   |
|  |    | Stop/OK     |    | Stop / Hold          |
|  |    | Right       |    | Right                |
|  |   | Down        |   | Down                 |
|  |  | Repeat      |  | Green / APP / Repeat |
|  |  | My Space    |  | Display / Media      |
|  |  | Nothing 1   |  | 1                    |
|  |  | Mute        |  | Mute / Dimmer        |
|  |  | Nothing 2   |  | 2                    |
|  |  | Diagnosis   |  | D.Menu / Top         |
|  |   |             |   |                      |
|  |   |             |   |                      |

