



Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Open / Close	 Exit	 Enter	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Audio / RL	 Dual
 5	 5	 OSD	 Info
 6	 6	 Zoom	 Eject
 7	 7	 Subtitle	 Subt
 8	 8	 DVD / USB	 Media
 9	 9	 Play / Pause	 Play
 0	 0	 Stop	 Stop
 Vol-	 Vol -	 Repeat	 Text
 Vol+	 Vol +	 Angle	 Format
 Setup	 Options	 <<	 <<
 Search	 TV/R	 >>	 >>
 Up	 Up	 I<<	 I<<

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 >>	 >>
 <<	 <<	 >>	 >>
 <<	 <<	 >>	 >>
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 PROG	 PROG	 SETTINGS	 SETTINGS
 SLEEP	 SLEEP	 OPT	 OPT
 E-MANUAL	 E-MANUAL	 ECO	 ECO
 D.MENU	 D.MENU	 3D	 3D
 REPEAT	 REPEAT	 TIMER	 TIMER
 TEXT	 TEXT	 AV	 AV
 ZOOM	 ZOOM	 ZOOM	 ZOOM
 TOP MENU/MENU	 TOP MENU/MENU	 DISPLAY/INFO	 DISPLAY/INFO
 MENU	 MENU	 ZOOM	 ZOOM
 AUDIO/RL	 AUDIO/RL	 EJECT	 EJECT
 OSD	 OSD	 SUBT	 SUBT
 ZOOM	 ZOOM	 APP/MEDIA	 APP/MEDIA
 SUBTITLE	 SUBTITLE	 PLAY MODE	 PLAY MODE
 DVD/USB	 DVD/USB	 PLAY	 PLAY
 PLAY/PAUSE	 PLAY/PAUSE	 STOP	 STOP
 STOP	 STOP	 REPEAT/TEXT	 REPEAT/TEXT
 REPEAT	 REPEAT	 PICTURE/FORMAT	 PICTURE/FORMAT
 ANGLE	 ANGLE	 >>	 >>
 >>	 >>	 <<	 <<
 <<	 <<	 >>	 >>
 <<	 <<	 I<<	 I<<



