 

 





 

 

 























 







 





| Original | Replacement |
|---|--|
|  Standby |  Power |
|  Eject |  Eject / Surround |
|  Source |  AV / Input / RDS |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |

| Original | Replacement |
|---|--|
|  Recall/+10 |  Back / Return |
|  FAV/Program |  Fav / Marker / PC |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  D.Setup |  Setup / OPT / |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
|  CH- |  CH- / Page- |
|  CH+ |  CH+ / Page+ |
|  Red/Goto |  Red / Netflix / Search |
|  Green/A-B |  Green / APP / Repeat |





| | Original | Replacement |
|---|--------------|---|
|  | Yellow/Angle |  Yellow / YouTube / Repeat |
|  | Blue/Repeat |  Blue / Prime Video / Random |
|  | Play/Hold |  Play / Slow |
|  | Pause |  Pause / Step / Freeze |
|  | Stop/Reveal |  Stop / Hold |
|  | Size/Aspect |  Zoom / Size |
|  | Subtitle |  Subtitle / EQ |
|  | << |  << / Tune- |
|  | Text |  Text / Goto |
|  | >>/Subpage |  >> / Tune+ |
|  | SCR/Title |  Shift + Sound / Title |
|  | Slow/EPG |  Guide / EPG / -/- |
|  | I<</Index |  I<< / Preset- |
|  | >>I/Mix |  >>I / Preset+ |
|  | D.Menu |  D.Menu / Top |
|  | I/II/Audio |  Audio / Lang I/II |
|  | Media |  Shift + Display / Media |

| | Original | Replacement |
|---|-----------|---|
|  | Rec |  Rec / Rec Mode |
|  | Timeshift |  Shift + Sleep / Timer |
|  | Tv/Radio |  TV/Radio / |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

