



 

 



 





 

 




 








 





Original	Replacement
	 Power
	 Shift + 2
	 Shift + 3
	 TV/Radio /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Guide / EPG / -/--
	 Setup / OPT /
	 Shift + Setup / OPT / Tools
	 Up
	 Down
	 Right
	 Left
	 OK

Original	Replacement
	 Back / Return
	 Fav / Marker / PC
	 Info / Angle
	 << / Tune-
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 >>I / Preset+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Picture / Format





Original	Replacement	Original	Replacement
	Net TV		Shift + 1
	Teletext		Text / Goto
	Disc Menu		D.Menu / Top
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subtitle / EQ
	Source		AV / Input / RDS
	Ambilight		Smart / List

Original	Replacement	Original	Replacement

