






 



 

 






 








 
 


 


 
 


 


 



 


 
 
 
 



 











 
 

 







 


















Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer	 Vol+	 Vol+
 Clock	 Shift + Sleep / Timer	 Vol-	 Vol-
 Dimmer	 Shift + Mute / Dimmer	 Top Menu	 D.Menu / Top
 Internet Radio	 TV/Radio /	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Search	 Red / Netflix / Search
 Music Server	 Audio / Lang I/II	 Setup	 Setup / OPT /
 Front USB	 Subtitle / EQ	 Up	 Up
 Rear USB	 Yellow / YouTube / Repeat	 Down	 Down
 AUX	 Shift + 7	 Left	 Left
 I<</CH-	 I<< / Preset-	 Right	 Right
 Play	 Play / Slow	 Enter	 OK
 Pause	 Pause / Step / Freeze	 1	 1
 >>I/CH+	 >>I / Preset+	 2	 2
 ADD Favorites	 CH+ / Page+	 3	 3
 Call Favorites	 CH- / Page-	 4	 4
 DBB/Tone	 Display / Media	 5	 5

Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Mute	 Mute / Dimmer
 Vol+	 Vol+	 Vol+	 Vol+
 Vol-	 Vol-	 Vol-	 Vol-
 Top Menu	 D.Menu / Top	 Top Menu	 D.Menu / Top
 Info	 Info / Angle	 Info	 Info / Angle
 Search	 Red / Netflix / Search	 Search	 Red / Netflix / Search
 Setup	 Setup / OPT /	 Setup	 Setup / OPT /
 Up	 Up	 Up	 Up
 Down	 Down	 Down	 Down
 Left	 Left	 Left	 Left
 Right	 Right	 Right	 Right
 Enter	 OK	 Enter	 OK
 1	 1	 1	 1
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5



