

 





 

 











 


 



 
 





 


 




 







 



















Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute / Dimmer		ENT		Fav / Marker / PC
	I-II		Audio / Lang I/II		Vol+		Vol+
	Scale		Smart / List		TV		TV/Radio /
	Sleep		Sleep / Timer		TV		Shift + 1
	Display		Display / Media		CH+		CH+ / Page+
	Text		Text / Goto		Vol-		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH-		CH- / Page-
	3		3		Exit		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Menu		Menu / Home
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		S.Mode		Sound / Title
	Jump		Back / Return		Down		Down



