

 

 







 


 


 
 


 







Original	Replacement	Original	Replacement
 Power	 Power	 TV/AV	 AV / Input / RDS
 Open/Close	 Eject / Surround	 P+	 CH+ / Page+
 Scan	 Display / Media	 TV/DVD	 Smart / List
 Swap	 Back / Return	 V-	 Vol-
 Call	 Shift + OK	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 V+	 Vol+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 P-	 CH- / Page-
 3	 3	 P.STD	 Picture / Format
 4	 4	 Red/Picture	 Shift + Picture / Format
 5	 5	 Red/Picture	 Red / Netflix / Search
 6	 6	 Green/Sound	 Sound / Title
 7	 7	 Green/Sound	 Green / APP / Repeat
 8	 8	 Yellow/Time	 Yellow / YouTube / Repeat
 9	 9	 Blue/Function	 Blue / Prime Video / Random
 0	 0	 <<	 << / Tune-
 -/--	 Guide / EPG / -/--	 >>	 >> / Tune+





	Original	Replacement		Original	Replacement
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			
	Tune	+ Shift + TV/Radio / Program			
	Up	Up			
	Down	Down			
	Program	TV/Radio /			
	Zoom	Zoom / Size			
	D.Call	Info / Angle			
	[◇]	+ Shift + Zoom /			
	[-]	D.Menu / Top			
	[/=]	+ Shift + Text /			
	[=]	Text / Goto			
	[X]	+ Shift + Exit / Cancel / Clear			
	[?]	Setup / OPT /			
	[+]	Subtitle / EQ			
	Timer	Sleep / Timer			
	>	Right			





Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 Scan	 Shift + Setup / OPT / Tools
 Swap	 Back / Return
 Call	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--

Original	Replacement
 TV/AV	 AV / Input / RDS
 I-II	 Shift + Audio / Lang I/II
 P+	 CH+ / Page+
 TV/DVD	 Shift + 2
 TV/DVD	 Shift + 1
 V-	 Vol-
 MENU	 Menu / Home
 V+	 Vol+
 EXIT	 Exit / Cancel / Clear
 P-	 CH- / Page-
 P.Std	 Picture / Format
 Red / Picture	 Red / Netflix / Search
 Red / Picture	 Shift + Picture / Format
 Green / Sound	 Green / APP / Repeat
 Green / Sound	 Shift + Sound / Title
 Yellow / Time	 Yellow / YouTube / Repeat
 Yellow / Time	 Sleep / Timer





Original	Replacement
Blue / Function	Blue / Prime Video / Random
Rev	<< / Tune-
Fwd	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Setup	Setup / OPT /
Pause / Step	Pause / Step / Freeze
White / Tune	Display / Media
D.Menu	D.Menu / Top
Up	Up
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
Left	Left
Play / Enter	Play / Slow
Play / Enter	OK
Right	Right

Original	Replacement
Slow	Shift + Play /
Angle	Info / Angle
Down	Down
Title / PBC	Sound / Title
Search	Shift + Red / Netflix /
Audio	Audio / Lang I/II
Program	TV/Radio /
Zoom	Zoom / Size
D.Call	Shift + Smart / List
10+	Shift + Guide / EPG / -/-
Caption	Subtitle / EQ
Hold	Shift + Stop /
[-]	Shift + TV/Radio / Program
Mix	Shift + Text /
Text	Text / Goto
[X]	Shift + Exit / Cancel / Clear
Reveal	Shift + Sleep / Timer





Original	Replacement	Original	Replacement
	 Shift + Zoom /		
	 Shift + Subtitle / EQ		
	 Shift + Eject / Surround		

